Locking Duo Basket

Installation Instructions

1. Remove any dome strainers or grates on the floor sink.

2. Size the crossmember to the drain pipe

Rotate the bolts out of the hexagon so they are approximately equal in length and can easily fit into the drain.



3. Insert

Place the Lock & Stop in the drain using the provided installation tool.



4. Twist

Rotate the hexagon to extend the screws until they are pressed firmly against the inner wall of the pipe.



5. Tighten

Tighten the hexagon with a wrench until the hole is up and down. Do not over-tighten.



6. Add extension rod if needed


The black basket is provided with the locking bolt and washer already in place. Put the black basket (with bolt) in the floor sink to determine if the bolt can reach the hexagon crossmember. If it does not, add the 4" extension rod and coupling to the T-45 bolt for added length (contact sales if a 6" extension is needed).


7. Insert security bolt

Thread the security bolt through the washers and black basket and screw into the crossmember (which is already in the drain pipe). Tighten security bolt with T-45 bit. Do not over-tighten as this could cause damage to the basket.

8. Insert Grey Basket

Place grey basket on top of the black basket. Empty as needed.

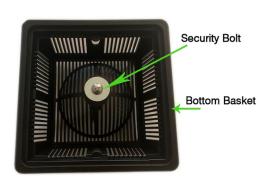

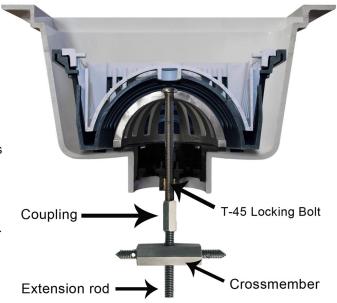

Side view of the Locking Duo Basket